

Flip Mino Digital Video Camera

Part 1: Camera Use and File Management


April 2009

- **Camera Use**

Get Started

Welcome to Flip Video Mino


- 1 Press power button.
- 2 Press record button. Have fun!



Note: The camcorder is shipped with a partially charged battery.

Record and Play

Touch-Sensitive Buttons
Gently touch lighted icons with your finger to activate the controls on the back panel.

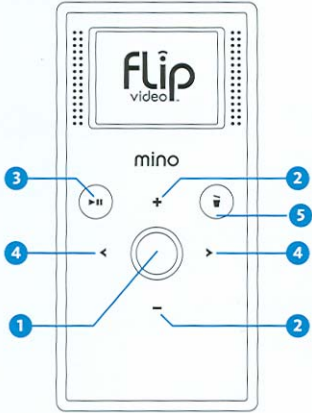

Recording Videos

- 1 Press record button to start/stop. ●
- 2 Touch up/down buttons to zoom in/out. +-


Playing Videos

- 3 Touch play/pause button to start/pause. >||
- 4 Touch left/right buttons to view previous/next. <>

Deleting Videos

- 5 Touch delete button. 🗑️ Select "Yes" to confirm.

- **File Management - save recorded video to network (Note – Please ask Elise or Joe to set up Flip software on your computer. You will not be able to view the videos until this software has been installed)**
 - Slide USB latch down. USB arm flips out automatically.
 - Connect Mino to USB port on computer
 - Close the following window when it opens up:

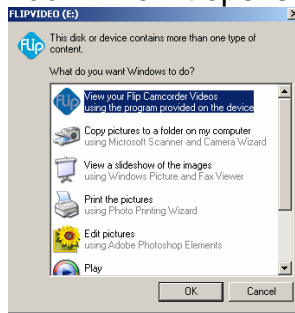

- Go to “My Computer” on your desktop
- Click on the Flip Video Icon



- Click on the “DCIM” folder
- Click on the “100Video” folder
- Select the video(s) which you wish to save. They are saved as .avi files.
- Open your network folder and save the video(s) to your network folder by dragging the file in to it.
- Once the video has been saved to your network folder you can delete the video from the camera. See Camera Use/Record and Play directions above for info on deleting.
- Disconnect the camera from the USB port by clicking on the “Safely Remove Hardware” icon in the task tray on your computer.